

snugseatTM

Car seat fitting Instructions

IMPORTANT WARNINGS

- 1 Before drilling any holes in the vehicle to fit seat check for petrol tank, pipes, cables, etc. to avoid any damage.
- 2 Before fitting bolts into anchorage points, check that there is adequate clearance for bolt length. If insufficient clearance shorten bolt before fitting.
- 3 Anchorages should only be mounted directly to secure metal panel or metal floor. If necessary cut through carpet, hardboard parcel shelf or other trim to allow access. Do not allow webbing to rub against sharp edges, or alter the design and specification in any way.
- 4 Always consult a garage if you are unsure where to fix the anchorage straps.
- 5 Replace seat or harness assemblies which are badly worn, damaged, or involved in a serious accident to maintain safety.
- 6 Do not place heavy objects on the vehicle parcel shelf which could injure the child in the snugseat.



Tendercare

Tendercare Ltd
 PO Box 3091
 Littlehampton
 West Sussex, BN16 2WF
 England
 Tel: 01903 726161
 Fax: 01903 734083
 Web: www.tendercareltd.com


Fitting belts to snugseat

The Snugseat comes with 4 seat belts.

- A 2 of which push through two vacant slots in the back of the seat (these should be on the same level as each other).
- B 2 of which push through the two slots in the side of the snugseat.

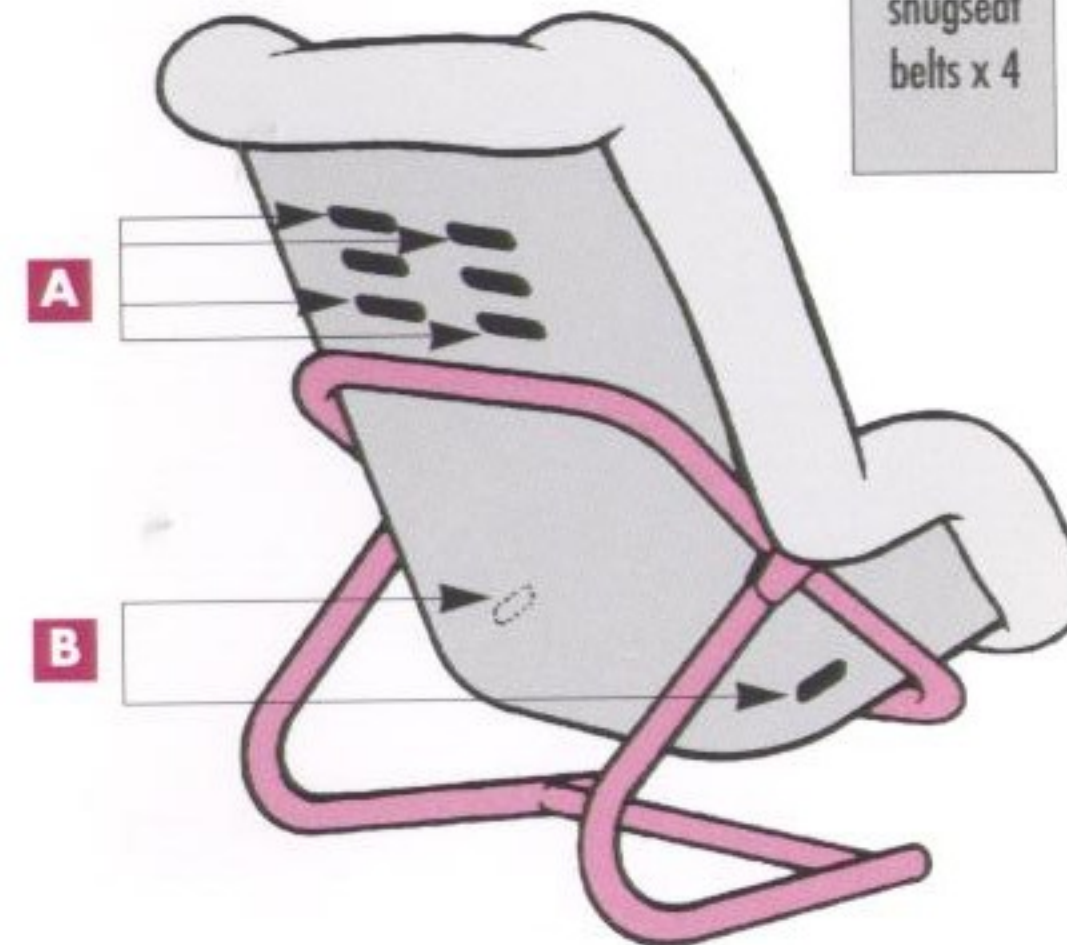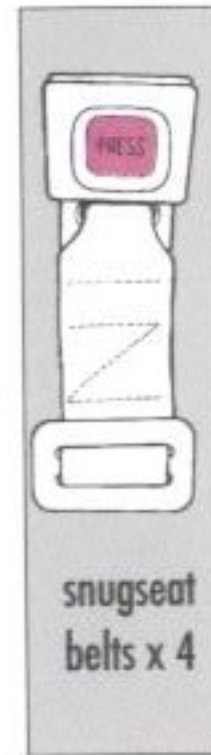

- C The 2 side belts (mentioned in B) fit through the same slots used by the seat's harness strap. Feed the side belt's buckle through whilst pulling the harness strap out of the way.

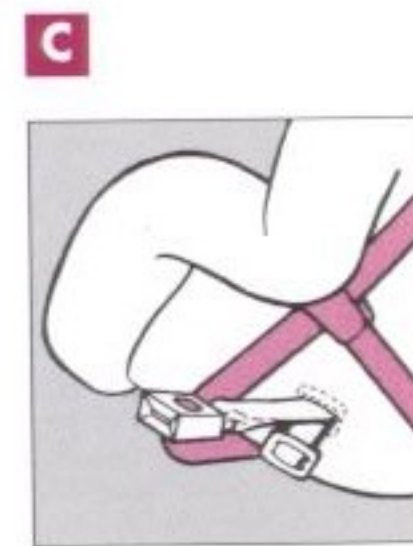

Always remember to keep the red release button facing upwards when fitting the seat belts.




Fitting anchorage straps to vehicle

The Snugseat comes with 4 anchorage straps.

- D 2 long straps (which locate into the 2 seat belts now attached to the back of the snugseat), and anchor to the metal parcel shelf or metal floor
- E 2 short straps (which locate into the 2 side belts now attached either side of the snugseat), and anchor to the seat pan.
- F All anchorage points should be made into the metal parcel shelf and seat pan in saloon cars or; into the metal floor and seat pan for hatchbacks, estates or saloon cars where the parcel shelf has no metal panel to provide a strong anchorage point.
- G If necessary slots approximately 50mm x 25mm should be cut in parcel shelf to allow strap to pass through and attach to the metal floor below.

Strengthening plates must be used when new anchorage points are fitted

Bolt to the vehicle using fitting as illustrated in Fig. 1 for tapped anchorages or Fig. 2 for vehicles where holes have to be drilled.

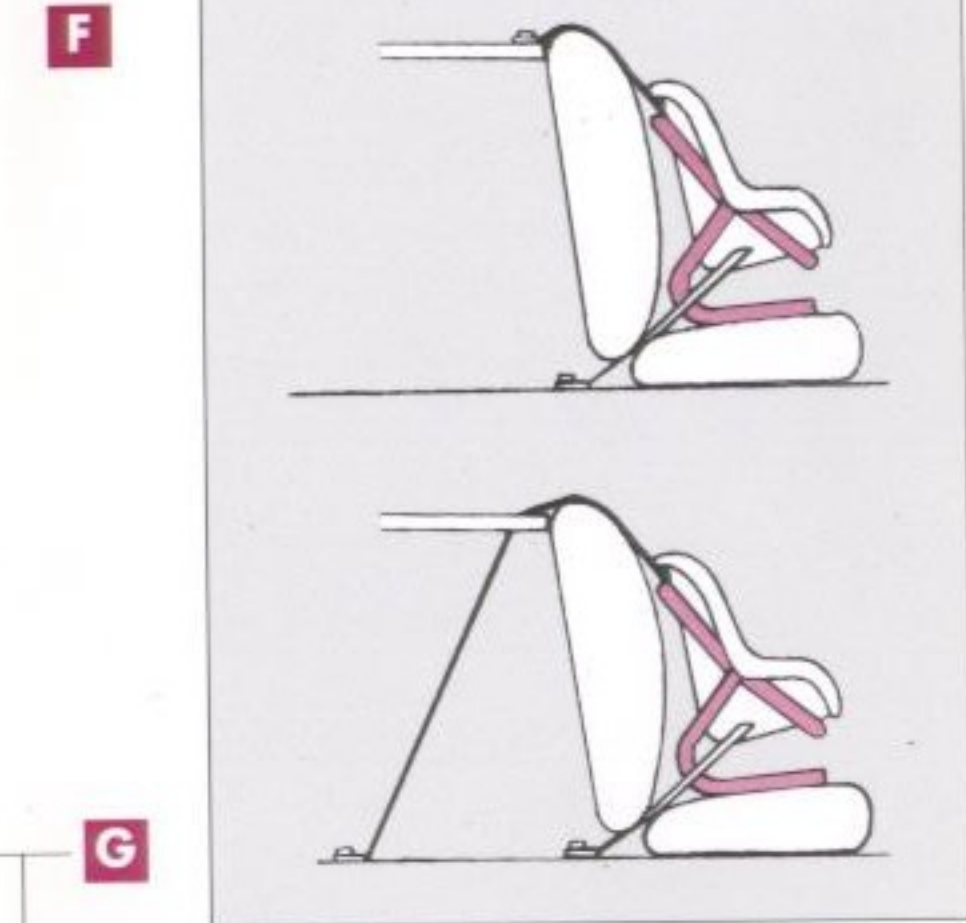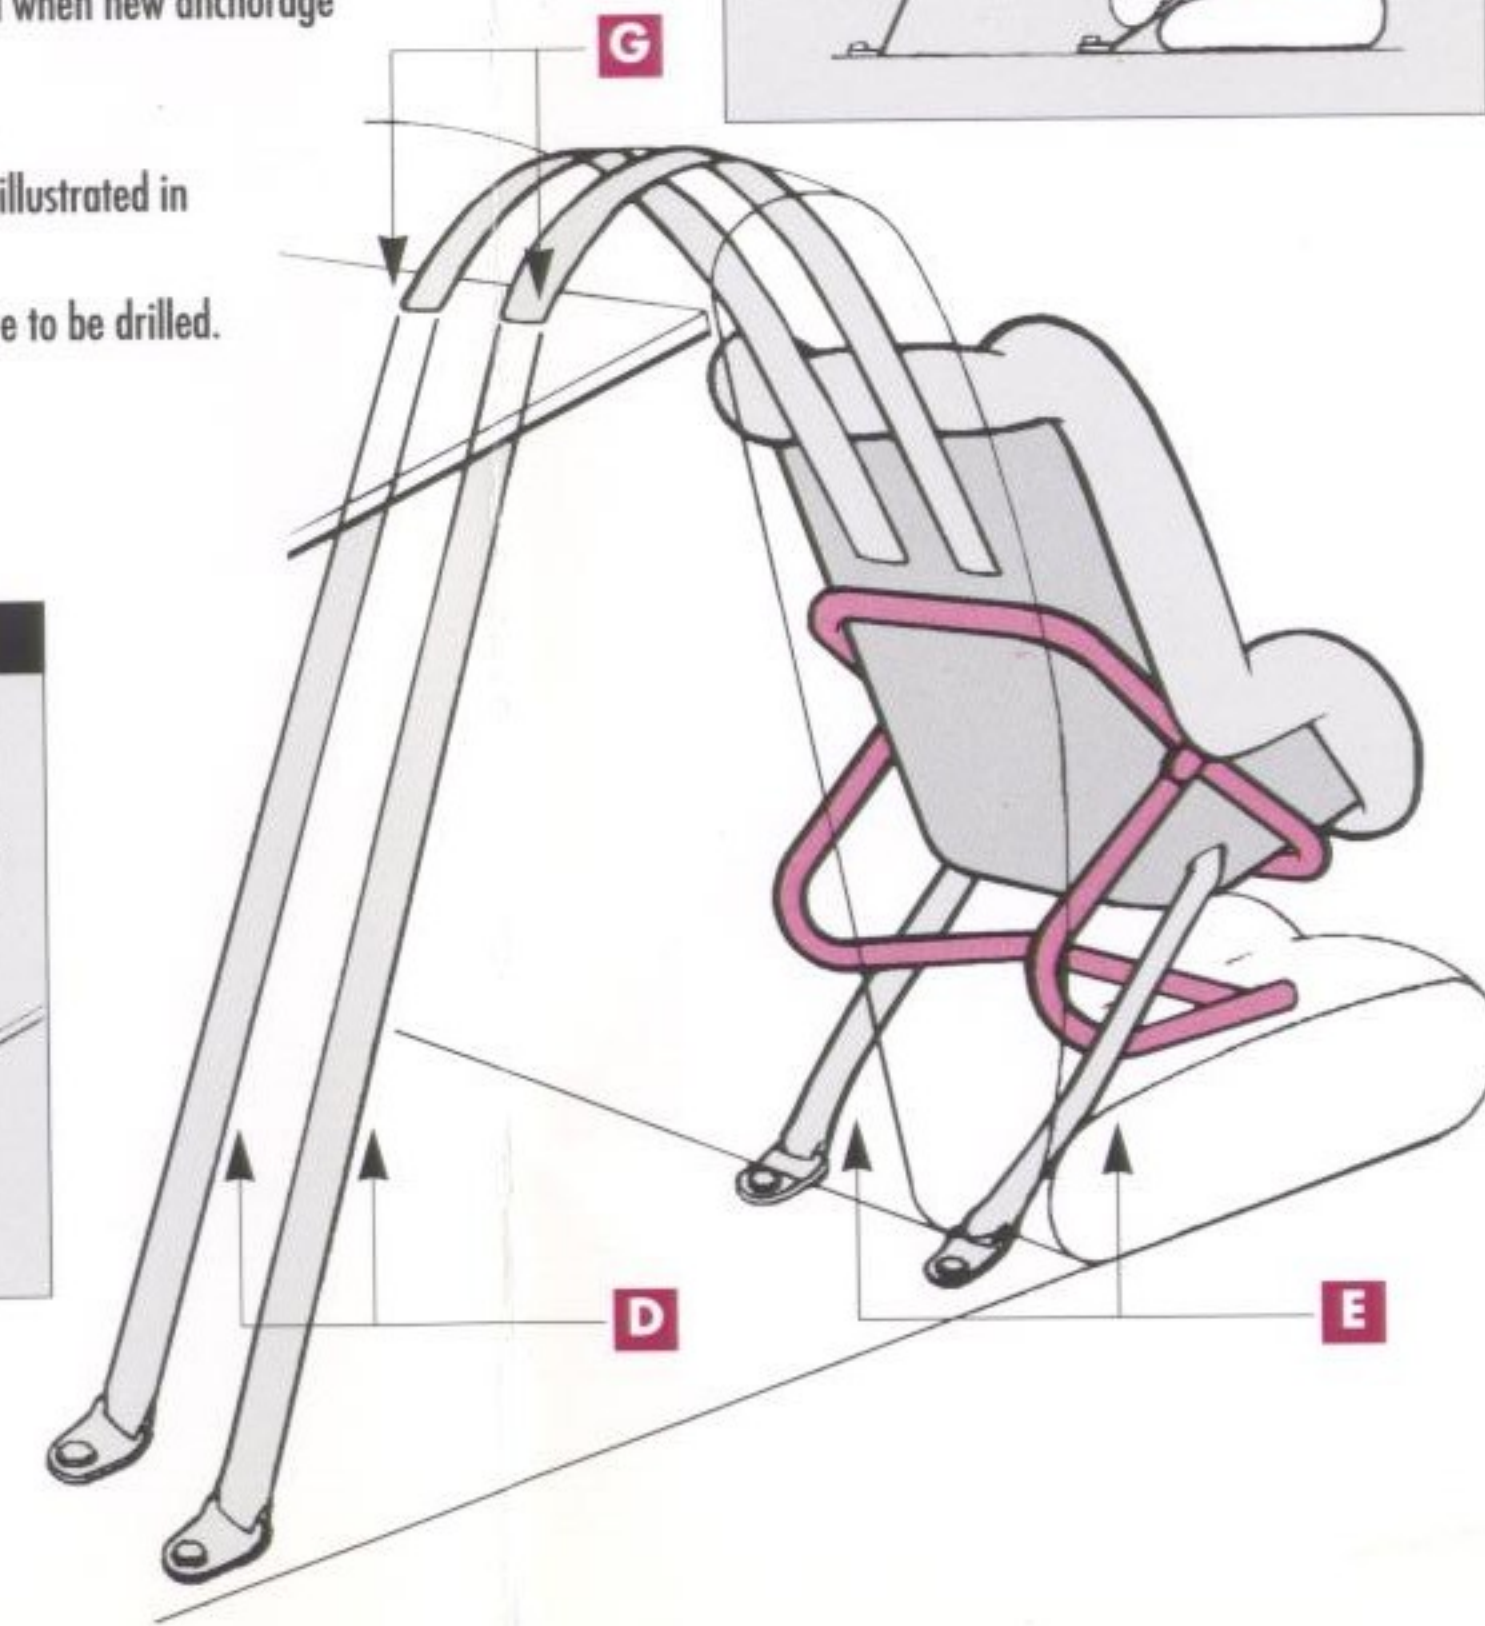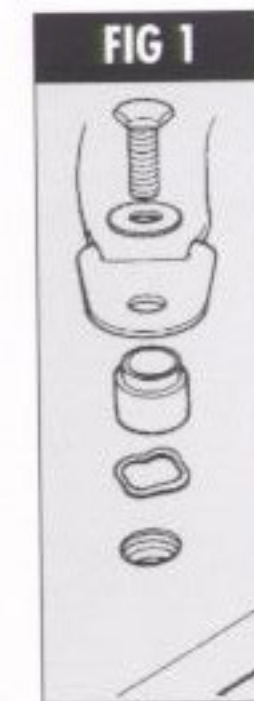

The fixing method depends on whether threaded anchorage points are built into the car and whether these can be utilised. The appropriate fixing method should be chosen to suit vehicle conditions. If your vehicle is fitted with anchorage points which are more than 300mm apart and situated in the locality of the junction of the seat pan and back, then these can be used.